



<h2 style="text-align: center;">Micro-Manager</h2> <p style="text-align: center;">For Compatibility: See Software Provider</p>							
Illumination System	Recognised in Micro-Manager as:	Required Micro-Manager version	USB Control	TTL Control (via external hardware)	Analog Control (via external hardware)	Further software information:	CoolLED Driver
<p>pE-2</p>	<p>precisExcite</p>	<p>1.4 or later</p>	<p>Individual Wavelength control</p>	<p>Individual Wavelength control</p>	<p>N/A</p>	<p> Click for link to Micromanager website pE-300 & pE-4000 device adapters are present in Micro-Manager 1.4.23 nightly builds as standard The device adapters can also be downloaded and added to the official 1.4.22 release only. </p>	<p>Windows XP onwards. 32-bit & 64-bit Click for link to CoolLED driver</p>
<p>pE-300^{white}</p>	<p>pE-300</p>	<p>1.4 or later</p>	<p>Individual Wavelength control</p>	<p>Global control</p>	<p>N/A</p>		<p>Windows 64-bit only Click for link to pE-300.dll</p>
<p>pE-300^{ultra}</p>	<p>pE-300</p>	<p>1.4 or later</p>	<p>Individual Wavelength control</p>	<p>Global, Individual and sequential Wavelength control</p>	<p>N/A</p>		
<p>pE-340^{fura}</p>	<p>pE-300</p>	<p>1.4 or later</p>	<p>Individual Wavelength control</p>	<p>Global, Individual and sequential Wavelength control</p>	<p>N/A</p>		
<p>pE-4000</p>	<p>pE-4000</p>	<p>1.4 or later</p>	<p>Individual Wavelength control</p>	<p>Individual Wavelength control</p>	<p>Individual Wavelength control</p>		<p>Windows 64-bit only Click for link to pE-4000.dll</p>