

VisiView					
Illumination System	USB Control	TTL Control (via ViRTEx Realtime Experiment Control Device)	Analogue Control (via external hardware)	Further software information:	CoolLED Driver
pE-400 <sup>max</sup>	Individual channel control	Global, individual and sequential channel control	N/A	<a href="#">VisiView information</a> <a href="#">pE-800 Series guide</a> <a href="#">ViRTEx information</a>	<a href="#">Link to CoolLED driver</a> Windows XP onwards. 32-bit & 64-bit
pE-400	Global control	Global control	N/A		
pE-4000	Individual channel control	Individual channel control	True Analogue		
pE-800 Series	Individual channel control	Global, individual and sequential channel control	True Analogue		
pE-300 <sup>ultra</sup>	Individual channel control	Global, individual and sequential channel control	N/A		
pE-300 <sup>white</sup>	Individual channel control	Global control	N/A		
pE-340 <sup>fura</sup>	Individual channel control	Global, individual and sequential channel control	N/A		
pE-2 (discontinued)	Individual channel control	Individual channel control	True Analogue		